

# BRACKET E-4

BRACKET E-4 is part of the **BRACKET E** ceiling-and-wall mount distance holder.

The base is used to mount the **BRACKET E-1 (GY)** body or the **BRACKET E-3 (GY)** spacer, or the **BRACKET E-5 (GY)** ball-joint holder.

The **BRACKET E-6** tamper sensor is mounted in the base.

